

RGB+CCT LED Controller (Model No.: FUT039P)

1. Features

Controller adopt the widely used 2.4GHz wireless technology with the features of low power consumption, long signal transmitting and strong anti-interference, etc. Controller has auto-transmitting and auto-synchronizing function. Widely used on the controlling of hotel lighting and home lighting.



17mm

2. Parameters

Input Voltage: DC12V~36V Output Current: 10A/Channel Total Output: Max 20A

16 Millions of colors to choose

Color temperature adjustable

2.4G RF wireless transmission technology

DMX512 controllable (DMX512 LED transmitter is needed)

RF: 2.4GHz

Working Temp.: -10~40°C Control Distance: 30m

Signal transmitting & Modes synchronization

Smartphone App control (2.4GHz gateway is needed)

Support third party voice control (2.4GHz gateway is needed) Support PUSH dimming



3. Dynamic mode table 1 (default)

o. Dynamic mode table i (delauit)			
Number	Dynamic Mode	Brightness / Saturation / Speed	
1	Mardi Gras		
2	Automatic color change	1	
3	Sam	7	
4	Gemstone	1	
5	Twilight	Adjustable	
6	American	1	
7	Fat Tuesday	1	
8	Party	1	
9	Slow Color Splash	7	

Dynamic mode table 2 (need to switch manually)

•	`	• /
Number	Dynamic Mode	Brightness / Saturation / Speed
1	Colors gradual change	Adjustable
2	White light Gradual change	
3	RGB gradual change	
4	Seven colors jump to change	
5	Jump to change randomly	
6	Red light gradual change +Flash 3 times	
7	Green light gradual change +Flash 3 times	
8	Blue light gradual change +Flash 3 times	
9	White light gradual change	

4. Dynamic mode table selection

Select dynamic mode table 1: The controller is powered off for 10 seconds and then powered on. Within 3 seconds, press the "S+" button 5 times, the blue light blink 3 times slowly, indicating successfully.

 
Select dynamic mode table 2: The controller is powered off for 10 seconds and then powered on. Within 3 seconds, press the "S-" key 5 times, and the yellow light blink 3 times slowly, indicating successfully.

5. Signal transmitting

 
One LED controller can transmit the signals from the remote control to another LED controller within 30m, as long as there is a LED controller within 30m, the remote control distance can be limitless.

6. Modes synchronization

Different LED controllers can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance.







7. Link Code / Unlink Code with remote

7.1 Link code

- (1) Making LED controller to enter Link code / Unlink code mode:
- Switch off LED controller, switch on again after 10 seconds.

 (2) Short press zone " | " or " N 3 times on remote within 3 seconds, light blinking 3 times slowly means the linking is done successfully.

Note: The * on * key for FUT089 / FUT089-B / B1 / B1-B / T1 / B2 / T2 remote don't support to link code.


7.2 Unlink code

- (1) Making LED controller to enter Link code / Unlink code mode:
- (1) Making LED controller, switch on again after 10 seconds.

 Switch off LED controller, switch on again after 10 seconds.

 (2) Short press zone " | " or " " 5 times on remote within 3 seconds, light blinking 10 times quickly means the unlinking is done successfully.

7.3 Compatible with these re emote controls (Purchase separately)

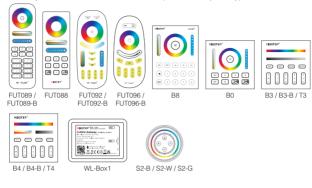

8. PUSH dimming

Short press push switch:

Long press push switch:

- turn on or turn off light
- stepless dimming brightness
- Long press / release and long press again to increase or decrease brightness.

9. PWM high frequency / low frequency switching

- Switch to high frequency (8KHz): on the condition of turning on the light

 1. Short press the "OFF" button of the remote control once;

 2. Short press the "ON" button 5 times within 3 seconds, the white light blink 2 times quickly, ndicating successfully

- Switch to low frequency (500Hz): on the condition of turning off the light

 
 1. Short press the "ON" button of the remote control once;

 2. Short press the "OFF" button 5 times within 3 seconds, the white light blink 2 times slowly,

10. DMX512 LED Transmitter Link/Unlink

Compatible with DMX512 LED Transmitter (Purchase separately)

 Choose the zone for the controller by pressing ' + ' or (e.g. 'CH12' means zone 12)



Link

Switch off the light, after 10 seconds switch on again

pilot lamp is on, short press " = " 3 times within 3 seconds

The controller pilot lamp blink slowly 3 times, means the linking is done successfully

Unlink


Switch off the light, after 10 seconds switch on again

When the controller pilot lamp is on, short press " (er) " 5 times within 3 seconds

The controller pilot lamp blink quickly 10 times, means the unlinking is done successfully

f the link or unlink failed, please follow the above steps again.

11. DMX512 LED Transmitter Connection Diagram

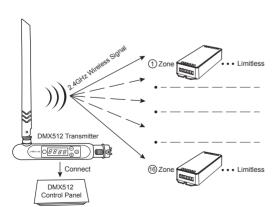

12. Attention

- 1. Please check whether the voltage of the power supply is in accordance with the controller, and please check the connection of both the cathode and anode, otherwise the controller will be broken.
- 2. Please don't connect wires with power on. Please turn on again only when it is in right
- connection and no short circuit.

 3. Please do not use the controller in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affective cted .





